

List of Compatible Device Models

Multi Monitoring & Control Software 3.2

- As of April 2022 -

In using this software, bear in mind that the items whose settings must be selected for the projectors and the functions that can be used may differ from one projector model to another. While referring to the table below, check out that projector models are compatible with the software before using them.

■ A list of compatible flat panel display models is available for download from the Panasonic website (<https://panasonic.net/cns/prodisplays/download/software/>).

List of device models

■ Projector*1

NTN91000*2	65	PT-DW730	31
NTN91001*2	65	PT-DW740	30
NTN91002*2	64	PT-DW750	18
NTN91003*2	64	PT-DW830	18
PT-D10000*3	33	PT-DW8300	29
PT-D12000	28	PT-DW90XE*3	29
PT-D3500*3	35	PT-DX100	18
PT-D4000	35	PT-DX500	32
PT-D5000	31	PT-DX610	30
PT-D5600*3	35	PT-DX800	31
PT-D5700	35	PT-DX810	30
PT-D6000	31	PT-DX820	18
PT-D7700*3	34	PT-DZ10K	17
PT-DS100XE*3	29	PT-DZ110XE*3	29
PT-DS12K	17	PT-DZ12000	28
PT-DS20K	17	PT-DZ13K	17
PT-DS20K2	16	PT-DZ16K	17
PT-DS8500	29	PT-DZ16K2	16
PT-DW100	28	PT-DZ21K	17
PT-DW10000*3	33	PT-DZ21K2	16
PT-DW105XEA*4	29	PT-DZ570	32
PT-DW11K	17	PT-DZ6700	31
PT-DW17K	17	PT-DZ6710	31
PT-DW17K2	16	PT-DZ680	30
PT-DW5000*3	35	PT-DZ770	30
PT-DW5100	35	PT-DZ780	18
PT-DW530	32	PT-DZ870	18
PT-DW6300	31	PT-DZ8700	29
PT-DW640	30	PT-EW530	39
PT-DW7000*3	34	PT-EW540	36

PT-EW550	37	PT-LB353*4	59
PT-EW551*4	38	PT-LB355*4	58
PT-EW630	39	PT-LB356*4	57
PT-EW640	36	PT-LB360	60
PT-EW650	37	PT-LB382	59
PT-EW651*4	38	PT-LB383	59
PT-EW730	36	PT-LB385*4	58
PT-EX12K	40	PT-LB386*4	57
PT-EX16K	40	PT-LB412	59
PT-EX500	39	PT-LB423	59
PT-EX510*4	36	PT-LB425	58
PT-EX520*4	37	PT-LB426	57
PT-EX521*4	38	PT-LB90NT	62
PT-EX600	39	PT-LRW35*4	56
PT-EX610	36	PT-LRZ35*4	56
PT-EX620	37	PT-LW25H	61
PT-EX621*4	38	PT-LW280	60
PT-EX800	36	PT-LW312	59
PT-EZ57*4	37	PT-LW330	60
PT-EZ570	39	PT-LW333*4	59
PT-EZ580	36	PT-LW335*4	58
PT-EZ590	37	PT-LW336*4	57
PT-EZ591*4	38	PT-LW362	59
PT-EZ770	36	PT-LW373	59
PT-F100NT	54	PT-LW375	58
PT-F200NT	54	PT-LW376	57
PT-F300	53	PT-LX26H	61
PT-F300NT	53	PT-LX30H	61
PT-FRQ50	14	PT-LZ370	55
PT-FRQ60	14	PT-MW530	21
PT-FRZ50	15	PT-MW630	21
PT-FRZ55	15	PT-MW730	21
PT-FRZ60*4	15	PT-MZ10K	19
PT-FW100NT	54	PT-MZ13K	19
PT-FW300	53	PT-MZ16K	19
PT-FW300NT	53	PT-MZ570	21
PT-FW430	52	PT-MZ670	21
PT-FW530	38	PT-MZ680	20
PT-FX400	52	PT-MZ770	21
PT-FX500*4	38	PT-MZ780	20
PT-FZ570	38	PT-MZ880	20
PT-JW130F*4	65	PT-RCQ10	10
PT-JW130G*4	65	PT-RCQ80	10
PT-JW130H*4	65	PT-RQ13K	8
PT-JX200F*4	64	PT-RQ22K	10
PT-JX200G*4	64	PT-RQ32K	8
PT-JX200H*4	64	PT-RQ35K	7
PT-LB1	63	PT-RQ50K	6
PT-LB1V	63	PT-RS11K	8
PT-LB2	63	PT-RS20K	10
PT-LB2V	63	PT-RS30K	8
PT-LB3	63	PT-RW330	27
PT-LB330	60	PT-RW430	26
PT-LB332*4	59	PT-RW620	12

PT-RW630	13	PT-VMZ50	23
PT-RW730	12	PT-VMZ51	22
PT-RW930	12	PT-VMZ51S*4	22
PT-RX110	12	PT-VMZ60	23
PT-RZ12K	8	PT-VMZ61	22
PT-RZ120	10	PT-VMZ71	22
PT-RZ16K	9	PT-VW330	47
PT-RZ21K	10	PT-VW340*4	50
PT-RZ31K	8	PT-VW345N	42
PT-RZ34K	7	PT-VW350*4	50
PT-RZ370	27	PT-VW355N	42
PT-RZ470	26	PT-VW360	49
PT-RZ475	25	PT-VW430	46
PT-RZ570	24	PT-VW431D	46
PT-RZ575	24	PT-VW435N	48
PT-RZ660	12	PT-VW440	46
PT-RZ670	13	PT-VW530*4	44
PT-RZ690	11	PT-VW535N	42
PT-RZ770	12	PT-VW540*4	43
PT-RZ790*4	11	PT-VW545N	41
PT-RZ870	13	PT-VX400	47
PT-RZ890	11	PT-VX400NT	48
PT-RZ970	12	PT-VX405*4	46
PT-RZ990*4	11	PT-VX406*4	51
PT-ST10	63	PT-VX41	47
PT-TW230	61	PT-VX410*4	50
PT-TW231R	61	PT-VX415N	42
PT-TW250*4	60	PT-VX42*4	50
PT-TW340*4	60	PT-VX420*4	50
PT-TW341R	60	PT-VX421*4	51
PT-TW342*4	60	PT-VX425N	42
PT-TW343R	60	PT-VX430	49
PT-TW350*4	59	PT-VX431K	49
PT-TW351R	59	PT-VX45*4	46
PT-TW370*4	58	PT-VX46*4	51
PT-TW371R	58	PT-VX50*4	44
PT-TW380*4	57	PT-VX500	46
PT-TW381R	57	PT-VX501*4	46
PT-TX310*4	60	PT-VX505N	48
PT-TX312*4	60	PT-VX51*4	43
PT-TX320*4	59	PT-VX510	46
PT-TX340*4	58	PT-VX60*4	44
PT-TX350*4	57	PT-VX600*4	44
PT-TX400*4	60	PT-VX605N	42
PT-TX402*4	60	PT-VX61*4	43
PT-TX410*4	59	PT-VX610	43
PT-TX430*4	58	PT-VX615N	41
PT-TX440*4	57	PT-VZ470*4	45
PT-VMW50	23	PT-VZ570*4	44
PT-VMW51	22	PT-VZ575N	42
PT-VMW60*4	23	PT-VZ580*4	43
PT-VMW61*4	22	PT-VZ585N	41
PT-VMZ40*4	23	TH-D10000	33
PT-VMZ41*4	22	TH-D3500	35

TH-D5600	35
TH-D7700	34
TH-DW10000	33
TH-DW5000	35
TH-DW7000	34

*1: Note on model groups

Devices are categorized into one of two groups depending on the type of information that can be accessed from them by the each software of the monitoring, control functions and the early warning function (paid).

The difference in the type of information that can be accessed for “rich information models” and “basic information models” is as follows.

○: Supported ×: Not supported

Item	Model categorization based on accessible information difference	
	Rich information model	Basic information model
Group Name	○	○
IP Address	○	○
Shutter (AV Mute)	○	○
Model Name	○	○
Serial Number	○*	×
Selected input	○	○
Power	○	○
Selected LIGHT	○*	×
LIGHT Power / Operating mode	○	×
Signal Freq.	○	×
Main Version	○	×
Network Version	○*	×
Power on hours	○	○*
Temperature	○*	×
LIGHT status	○*	○*
Fan status	○*	×

* May not be accessible depending on the device.

*2: Model number of product sold in Japan. This will differ for products sold in other regions.

*3: Model number of product sold in regions other than Japan. This will differ for products sold in Japan.

*4: Not sold in Japan.

Notes

The software is not compatible with any device models not appearing in this “Device model list.”

Peripheral device list

■ Peripheral devices

DIGITAL LINK Switcher

ET-YFB200 66

Network camera

Panasonic BB-S Series, DG-S Series, WV-S Series, AW-UN70 Series, AW-HN130 Series, AW-HN40 Series, AW-HE130 Series, AW-HE40 Series, and AW-HR140 network cameras are supported. Allows the video shown on a display (projector or flat-panel display) to be checked remotely through a camera.

PT-RQ50K

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/E/X/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	PJLink	Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	1024
		PJLink control	ON
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	DATA CLONING	○	
	Remote preview function or remote preview lite	○	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-RQ35K / PT-RZ34K

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/E/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	Set by user* ¹
		Password	Set by user* ¹
	PJLink	Password	Set by user* ¹
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	1024
		PJLink control	ON
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	DATA CLONING	○	
	Remote preview function or remote preview lite	○	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: The user name and password settings are required at the time of initial configuration.

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-RZ16K

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: (blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	Set by user* ¹
		Password	Set by user* ¹
	PJLink	Password	Set by user* ¹
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	1024
		PJLink control	ON
	ECO management		
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Wireless settings display function	×	
	DATA CLONING	○	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: The user name and password settings are required at the time of initial configuration.

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: A/D/E/J/X/(blank), lens: (blank)/L, cabinet color: B/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	PJLink	Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		DATA CLONING	○
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-RZ990 / PT-RZ890 / PT-RZ790 / PT-RZ690

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/(blank), lens: (blank)/L, cabinet color: B/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	Set by user* ¹
		Password	Set by user* ¹
	PJLink	Password	Set by user* ¹
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		DATA CLONING	○
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: The user name and password settings are required at the time of initial configuration.

PT-RZ970 / PT-RW930 / PT-RX110 / PT-RZ770 / PT-RW730 / PT-RZ660 / PT-RW620

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-FRQ60

■ PT-FRQ50

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/T/(blank), cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	Set by user*1
		Password	Set by user*1
	PJLink	Password	Set by user*1
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
	Standby mode	—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	○	
	Remote preview function or remote preview lite	○	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

*1: The user name and password settings are required at the time of initial configuration.

PT-FRZ60 / PT-FRZ50 / PT-FRZ55

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/T/(blank), cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	Set by user* ¹
		Password	Set by user* ¹
	PJLink	Password	Set by user* ¹
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: The user name and password settings are required at the time of initial configuration.

PT-DZ21K2 / PT-DS20K2 / PT-DW17K2 / PT-DZ16K2

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ21K / PT-DS20K / PT-DW17K / PT-DZ16K

■ PT-DZ13K / PT-DS12K / PT-DW11K / PT-DZ10K

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
	Standby mode	—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Early warning function (paid)	Wireless settings display function	X
		DATA CLONING	X
		Remote preview function or remote preview lite	X
		Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function	X		
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-MZ16K / PT-MZ13K / PT-MZ10K

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/E/J/X/(blank), lens: L, cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	PJLink	Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	1024
		PJLink control	ON
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-MZ880 / PT-MZ780 / PT-MZ680

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/T/(blank), cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	Set by user* ¹
		Password	Set by user* ¹
	PJLink	Password	Set by user* ¹
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	1024
		PJLink control	ON
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	○	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: The user name and password settings are required at the time of initial configuration.

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: A/D/J/(blank), lens: (blank)/L, cabinet color: (blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	PJLink	Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	○
		ECO Power Level Monitor Function	X
		Wireless settings display function	○*3
	DATA CLONING	○	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	X
		Display of WEB control screen for devices function	○
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function		○	

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

*3: Optional wireless module (ET-WM300) is required.

PT-VMZ71 / PT-VMZ61 / PT-VMZ51 / PT-VMZ51S / PT-VMZ41 / PT-VMW61 / PT-VMW51

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/T/(blank), cabinet color: B/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	Set by user* ¹
		Password	Set by user* ¹
	PJLink	Password	Set by user* ¹
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: The user name and password settings are required at the time of initial configuration.

PT-VMZ60 / PT-VMZ50 / PT-VMZ40 / PT-VMW60 / PT-VMW50

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/T/(blank), cabinet color: B/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	PJLink	Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Wireless settings display function	×	
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-RZ575 / PT-RZ570

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: A/D/J/T/(blank), cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
	Stopped camera image detecting function	○	

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-RZ475

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	—
		PJLink control	ON
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○*3
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

*3: If the temperature of the projector's surroundings is elevated, light output may be reduced in order to protect the projector unit. If this software is used for the brightness control of multiple projectors, please ensure that as far as possible the temperature of the surroundings is the same for all projectors.

PT-RZ470 / PT-RW430

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/U/(blank), cabinet color: K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○*3
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	○
	Wireless settings display function	X	
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

*3: If the temperature of the projector's surroundings is elevated, light output may be reduced in order to protect the projector unit. If this software is used for the brightness control of multiple projectors, please ensure that as far as possible the temperature of the surroundings is the same for all projectors.

PT-RZ370 / PT-RW330

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	—
		PJLink control	ON
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	○
	Wireless settings display function	X	
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-DZ12000 / PT-D12000 / PT-DW100

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility		
Optional accessories	Expansion boards	Not required (LAN terminal installed)*1		
Connection to projector	IP address	Only fixed IP address supported		
	WEB control screen login	User name	admin1*2	
		Password	panasonic*3	
	PJLink	Password	panasonic*3	
	Content Manager login	User name	—	
Password		—		
Projector settings	Network standby	ON		
	Network control			
	WEB control	ON		
	Command control	—		
	WEB port / Command port	1024		
	PJLink control	ON		
	ECO management			
Standby mode	—			
Functions	Standby mode			
	Auto search (local network) function		×	
	Device status monitoring function (Simplified)		○	
	Device location information registering function (Map monitoring function)		○	
	Command transmission function		○	
	Simultaneous image distribution function		×	
	Distribution image deletion function		×	
	Interrupting delivery function		×	
	Brightness control function		×	
	ECO management function		×	
	Signage schedule acquisition and delivery functions		×	
	Maintenance log save function		○	
	Contents list delivery function		×	
	ECO Power Level Monitor Function		×	
	Wireless settings display function		×	
	DATA CLONING		×	
	Remote preview function or remote preview lite		×	
	Early warning function (paid)	Status monitoring function (Details)		○
		Error, warning, and notification guidance displays function		○
		Basic control functions (power, Shutter / AV muting)		○
		Fan failure prediction function		×
		Filter clog prediction		×
		Maintenance prediction function		○
		Temperature information graph display function		○
		Voltage information graph display function		×
		Display of WEB control screen for devices function		○
		System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○
Stopped camera image detecting function		○		

*1: Of the commercially available expansion boards, the ET-MD77NT network board is not supported.
With expansion boards other than the ET-MD77NT, the network function on the expansion board side cannot be used (DVI, SDI, and other inputs are enabled).
The ET-MD100SD4 digital signal input board (for dual link HD-SDI) is supported.

*2: This is the user name provided at the time of shipment.

*3: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-DZ8700 / PT-DS8500 / PT-DW8300 / PT-DZ110XE / PT-DS100XE / PT-DW90XE / PT-DW105XEA

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
		DATA CLONING	×
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/U/(blank), cabinet color: K/S/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ6710 / PT-DZ6700 / PT-DW6300 / PT-D6000 / PT-D5000

■ PT-DW730 / PT-DX800

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/U/(blank), cabinet color: K/S/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-DZ570 / PT-DW530 / PT-DX500

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

TH-DW10000 / TH-D10000 / PT-DW10000 / PT-D10000

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/U)

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not required (LAN terminal installed)*1	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	user1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Functions	Auto search (local network) function	×	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	×	
	Distribution image deletion function	×	
	Interrupting delivery function	×	
	Brightness control function	×	
	ECO management function	×	
	Signage schedule acquisition and delivery functions	×	
	Maintenance log save function	×	
	Contents list delivery function	×	
	ECO Power Level Monitor Function	×	
	Wireless settings display function	×	
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

*1: Of the commercially available expansion boards, the ET-MD77NT network board is not supported.

With expansion boards other than the ET-MD77NT, the network function on the expansion board side cannot be used (DVI, SDI, and other inputs are enabled).

The ET-MD100SD4 digital signal input board (for dual link HD-SDI) is supported. (except for TH-D10000 and PT-D10000)

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

TH-D7700 / TH-DW7000 / PT-D7700 / PT-DW7000

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/U, cabinet color: K/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Expansion board required*1	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	user1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
	Standby mode	—	
Functions	Standby mode	—	
	Auto search (local network) function	X	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	X	
	Distribution image deletion function	X	
	Interrupting delivery function	X	
	Brightness control function	X	
	ECO management function	X	
	Signage schedule acquisition and delivery functions	X	
	Maintenance log save function	X	
	Contents list delivery function	X	
	ECO Power Level Monitor Function	X	
	Wireless settings display function	X	
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X	
Stopped camera image detecting function	○		
Monitoring and control functions	Auto search (local network) function	X	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	X	
	Distribution image deletion function	X	
	Interrupting delivery function	X	
	Brightness control function	X	
	ECO management function	X	
	Signage schedule acquisition and delivery functions	X	
	Maintenance log save function	X	
	Contents list delivery function	X	
	ECO Power Level Monitor Function	X	
	Wireless settings display function	X	
DATA CLONING	X		

*1: One of the following commercially available expansion boards with a network function is required.

Network board: ET-MD77NT

Digital signal input board (for SD-SDI): ET-MD77SD1

Digital signal input board (for HD-SDI): ET-MD77SD3

Digital signal input board (for DVI): ET-MD77DV

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-D5700 / PT-D4000 / PT-DW5100

■ TH-D5600 / PT-D5600 / TH-DW5000 / PT-DW5000

■ TH-D3500 / PT-D3500

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/U/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	user1
		Password	panasonic*1
	PJLink	Password	panasonic*1
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
	Standby mode	—	
Functions	Standby mode	—	
	Auto search (local network) function	X	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	X	
	Distribution image deletion function	X	
	Interrupting delivery function	X	
	Brightness control function	X	
	ECO management function	X	
	Signage schedule acquisition and delivery functions	X	
	Maintenance log save function	X	
	Contents list delivery function	X	
	ECO Power Level Monitor Function	X	
	Wireless settings display function	X	
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
Fan failure prediction function		X	
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X	
Stopped camera image detecting function	○		
Monitoring and control functions	Auto search (local network) function	X	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	X	
	Distribution image deletion function	X	
	Interrupting delivery function	X	
	Brightness control function	X	
	ECO management function	X	
	Signage schedule acquisition and delivery functions	X	
	Maintenance log save function	X	
	Contents list delivery function	X	
	ECO Power Level Monitor Function	X	
	Wireless settings display function	X	
DATA CLONING	X		

*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-EZ770 / PT-EW730 / PT-EX800

■ PT-EZ580 / PT-EW640 / PT-EW540 / PT-EX610 / PT-EX510

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: A/D/J/K/T/Z/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-EZ590*3 / PT-EW650*3 / PT-EW550*3 / PT-EX620*3 / PT-EX520*3 / PT-EZ57*3

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/K/T/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

*3: Devices for which the main microcomputer version is below Ver.1.08 do not support the early warning function. You can check the version on the following page as [Projector Information] --> [Main Version] in the WEB control screen.

■ PT-EZ591 / PT-EW651 / PT-EW551 / PT-EX621 / PT-EX521

■ PT-FZ570*3 / PT-FW530*3 / PT-FX500*3

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/K/T/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Functions	Standby mode	Normal	
	Auto search (local network) function	X	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	X	
	Distribution image deletion function	X	
	Interrupting delivery function	X	
	Brightness control function	X	
	ECO management function	○	
	Signage schedule acquisition and delivery functions	X	
	Maintenance log save function	○	
	Contents list delivery function	X	
	ECO Power Level Monitor Function	X	
	Wireless settings display function	X	
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
Fan failure prediction function		○	
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

*3: Devices for which the main microcomputer version is below Ver.1.08 do not support the early warning function. You can check the version on the following page as [Projector Information] --> [Main Version] in the WEB control screen.

PT-EZ570 / PT-EW630 / PT-EW530 / PT-EX600 / PT-EX500

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal, Network	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-EX16K ■ PT-EX12K

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Functions	Standby mode	—	
	Auto search (local network) function	×	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	×	
	Distribution image deletion function	×	
	Interrupting delivery function	×	
	Brightness control function	×	
	ECO management function	×	
	Signage schedule acquisition and delivery functions	×	
	Maintenance log save function	○	
	Contents list delivery function	×	
	ECO Power Level Monitor Function	×	
	Wireless settings display function	×	
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
Fan failure prediction function		×	
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-VZ585N / PT-VW545N / PT-VX615N

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/T/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	—
		PJLink control	ON
		ECO management	
	Standby mode	Normal	
	Standby mode		—
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	○
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VZ575N / PT-VW535N / PT-VX605N

■ PT-VW355N / PT-VX425N

■ PT-VW345N / PT-VX415N

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/T/Z/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	○
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
	Stopped camera image detecting function	○	

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-VZ580 / PT-VW540 / PT-VX610 / PT-VX61 / PT-VX51

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/K/K1/T/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	ON	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Early warning function (paid)	Wireless settings display function	X
		DATA CLONING	X
		Remote preview function or remote preview lite	X
		Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function	X		
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/T/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-VZ470

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		ON
	WEB control		—
	Command control		—
	WEB port / Command port		—
	PJLink control		—
	ECO management		
Standby mode		—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		DATA CLONING	X
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VW440 / PT-VX510

■ PT-VW431D

■ PT-VW430 / PT-VX501 / PT-VX500 / PT-VX405 / PT-VX45

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/KEA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
	Standby mode	—	
	Standby mode	Network	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Early warning function (paid)	Wireless settings display function	X
		DATA CLONING	X
		Remote preview function or remote preview lite	X
		Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction	X		
Maintenance prediction function	○		
Temperature information graph display function	○		
Voltage information graph display function	X		
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/KEA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Network	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		DATA CLONING	X
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Network	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X	
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-VW360 / PT-VX430 / PT-VX431K

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/T/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	PJLink	Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		DATA CLONING	X
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/EA/J/T/Z/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VX421 ■ PT-VX406 / PT-VX46

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/EA/J/T/Z/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-FW430 / PT-FX400

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		ON
	WEB control		—
	Command control		—
	WEB port / Command port		—
	PJLink control		—
	ECO management		
Standby mode		—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-FW300NT / PT-FW300 / PT-F300NT / PT-F300

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		ON
	Network control		ON
	WEB control		—
	Command control		—
	WEB port / Command port		—
	PJLink control		—
	ECO management		
Standby mode		—	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Early warning function (paid)	Wireless settings display function	X
		DATA CLONING	X
		Remote preview function or remote preview lite	X
		Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction	X		
Early warning function (paid)	Maintenance prediction function	○	
	Temperature information graph display function	○	
	Voltage information graph display function	X	
	Display of WEB control screen for devices function	○	
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X	
Stopped camera image detecting function		○	

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-FW100NT / PT-F100NT ■ PT-F200NT

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	user1
		Password	No password set* ¹
	PJLink	Password	No password set* ¹
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	ON	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Functions	Auto search (local network) function	×	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	×	
	Distribution image deletion function	×	
	Interrupting delivery function	×	
	Brightness control function	×	
	ECO management function	×	
	Signage schedule acquisition and delivery functions	×	
	Maintenance log save function	×	
	Contents list delivery function	×	
	ECO Power Level Monitor Function	×	
	Wireless settings display function	×	
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	×
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

*1: This is the setting provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-LZ370

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		ON
	WEB control		—
	Command control		—
	WEB port / Command port		—
	PJLink control		—
	ECO management		
Standby mode		—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
		DATA CLONING	×
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-LRZ35 / PT-LRW35

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: U/(blank))

Model group: **Basic information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	dispadmin* ¹
		Password	Set by user* ¹
	PJLink	Password	Set by user* ¹
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	—
		Command control	—
		WEB port / Command port	—
		PJLink control	—
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	X
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	X
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		DATA CLONING	X
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	X
		Temperature information graph display function	X
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

*1: The user name and password settings are required at the time of initial configuration.

■ PT-LB426 / PT-LB386 / PT-LB356 / PT-LW376 / PT-LW336

■ PT-TW381R / PT-TW380 / PT-TX440 / PT-TX350

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/T/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	Set by user* ¹
		Password	Set by user* ¹
	PJLink	Password	Set by user* ¹
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management	—	
	Standby mode	—	
Standby mode	Normal		
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X	
Stopped camera image detecting function	○		

*1: The user name and password settings are required at the time of initial configuration.

■ PT-LW375 / PT-LW335 / PT-LB425 / PT-LB385 / PT-LB355

■ PT-TW371R / PT-TW370 / PT-TX430 / PT-TX340

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/K/T/U/(blank))

Model group: **Basic information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin
		Password	admin1* ¹
	PJLink	Password	admin1* ¹
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
	Standby mode	—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	X
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	X
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		X	
Temperature information graph display function		X	
Voltage information graph display function		X	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-LW373 / PT-LW333 / PT-LB423 / PT-LB383 / PT-LB353

■ PT-TW351R / PT-TW350 / PT-TX410 / PT-TX320

■ PT-LW362 / PT-LW312 / PT-LB412 / PT-LB382 / PT-LB332

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/(blank))

Model group: **Basic information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin
		Password	admin1*1
	PJLink	Password	admin1*1
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	×
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	×
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	×
		Temperature information graph display function	×
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-LW330*2 / PT-LW280*2 / PT-LB360*2 / PT-LB330*2

■ PT-TW343R / PT-TW342 / PT-TX402 / PT-TX312

■ PT-TW341R*2 / PT-TW340*2 / PT-TW250*2 / PT-TX400*2 / PT-TX310*2

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/J/(blank))

Model group: **Basic information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin
		Password	admin1*1
	PJLink	Password	admin1*1
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby		—
	Network control		
		WEB control	—
		Command control	—
		WEB port / Command port	—
		PJLink control	—
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	X
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	X
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		DATA CLONING	X
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	X
		Temperature information graph display function	X
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

*2: Only devices with serial numbers that start with "B" or "DB53" are supported.

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Network	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		DATA CLONING	X
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-LB90NT

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		ON
	WEB control		—
	Command control		—
	WEB port / Command port		—
	PJLink control		—
	ECO management		
Standby mode		—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-LB3 / PT-LB2V / PT-LB2 / PT-LB1V / PT-LB1 / PT-ST10

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	DATA CLONING	×	
	Remote preview function or remote preview lite	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/E/K/T/U, cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	admin1*1
Password		panasonic*3	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal*4	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	○
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	○
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Wireless settings display function	○	
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

*3: This is the password provided at the time of shipment. Use the same password as for Content Manager supplied with the projector.

*4: When set to "Network" or "ECO", information acquisition and control will be disabled.

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: D/E/K/T/U, cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	admin1*1
Password		panasonic*3	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal*4	
Functions	Monitoring and control functions		
	Auto search (local network) function	○	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	○	
	Distribution image deletion function	○	
	Interrupting delivery function	○	
	Brightness control function	X	
	ECO management function	○	
	Signage schedule acquisition and delivery functions	○	
	Maintenance log save function	X	
	Contents list delivery function	X	
	ECO Power Level Monitor Function	X	
	Wireless settings display function	○	
	DATA CLONING	X	
	Remote preview function or remote preview lite	X	
	Early warning function (paid)		
	Status monitoring function (Details)	○	
	Error, warning, and notification guidance displays function	○	
	Basic control functions (power, Shutter / AV muting)	○	
	Fan failure prediction function	○	
	Filter clog prediction	X	
Maintenance prediction function	○		
Temperature information graph display function	○		
Voltage information graph display function	X		
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

*1: This is the user name provided at the time of shipment.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

*3: This is the password provided at the time of shipment. Use the same password as for Content Manager supplied with the projector.

*4: When set to "Network" or "ECO", information acquisition and control will be disabled.

ET-YFB200

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Alphabet letters at end (place of destination: G/(blank))

○: Supported ×: Not supported —: Not available

		Setting / compatibility
Connection to DIGITAL LINK Switcher	IP address	Only fixed IP address supported
	User name	admin1*1
	Password	panasonic*2
DIGITAL LINK Switcher settings	Network standby	—
	Network control	—
	WEB control	ON
	WEB port / Command port	1024
	PJLink control	ON
Functions	DIGITAL LINK Switcher I/O status display	○
	Fan status display	○
	WEB control screen display	×

*1: This is the user name provided at the time of shipment. Connect using a user with administrator privileges.

*2: This is the password provided at the time of shipment. The password is identical to that used for WEB control of the DIGITAL LINK switcher unit.